

February Promotion!

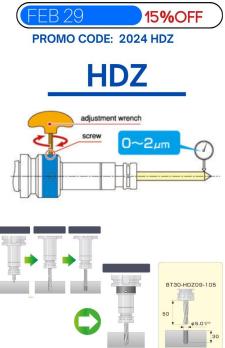



Get 15% OFF from standard price! (Standard catalog items only)

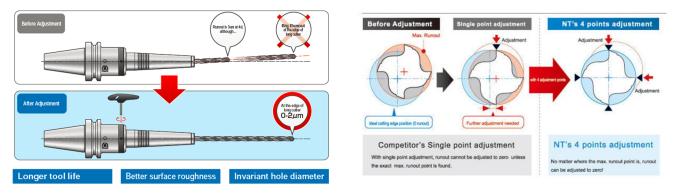

Zero runout is important especially when you are using a long drill. Like our 4D measurement, the further out you get along the cutting tool, the bigger the runout measurement is recorded. However with the R Zero, you will take runout to zero at the tip of the cutting tool. This will lead to invariant holes, better surface finish using ball end milling, long drill applications, and more. Online catalog

https://www.nttoolusa.com/products/pid/19/